



somfy® Building happiness

ROMAN MOTOR MANUAL
TILT & LIFT 25
FIT67 - V1



IMPORTANT INFORMATION ON BLIND INSTALLATION

Prior to beginning any work please ensure you read the instructions.

Blind brackets should be fitted before the battery pack.

To fit blinds please follow the fitting instructions provided.

Please ensure you leave enough room behind the blind to install your battery pack.

BATTERY PACK FITTING INSTRUCTIONS

SINGLE BATTERY WAND


1. Open the battery wand, insert the batteries and screw closed. Ensure that the wand is screwed tightly on both ends.



2. Fix the mounting brackets to the selected area you wish to place the battery wand.

**The battery wand can be secured outside the headrail in either vertical or horizontal position.*



We recommend the battery wand is secured behind the headrail so it is hidden from view.

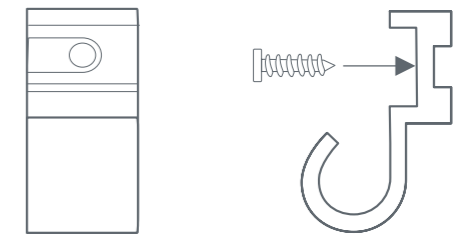

3. Clip the battery wand into the mounting brackets.



4. Connect the battery wand to the motor.

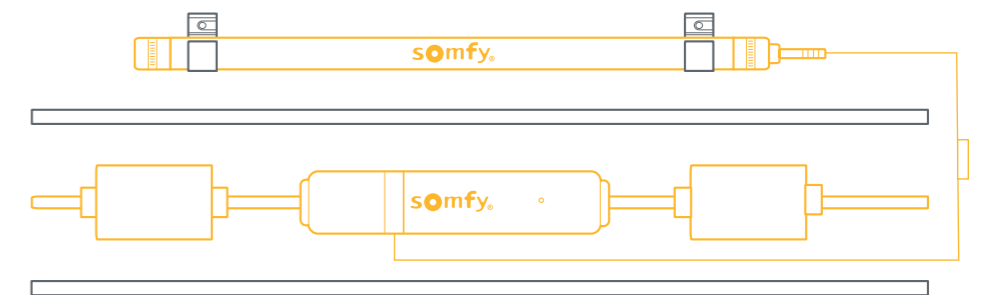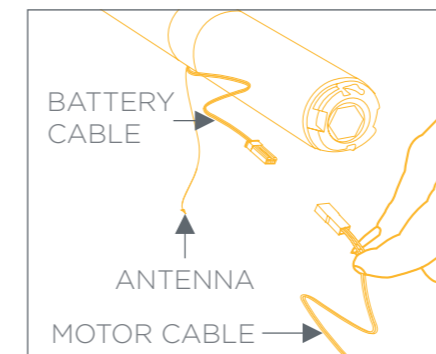


**To charge the rechargeable battery wand, do not remove the batteries. Charge via the plug in Somfy AC Battery Charger by removing the battery wand from the bracket and recharging for recommended time of six hours.*

BATTERY PACK FITTING INSTRUCTIONS

DUAL BATTERY WAND


1. Open the dual battery wands, insert the batteries and screw closed. Ensure that the wand is screwed tightly on both ends.

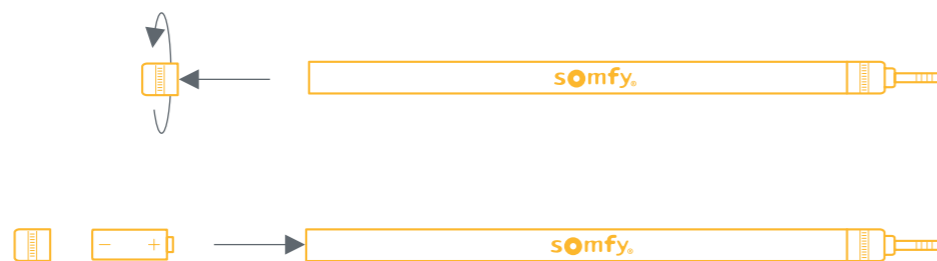


2. Fix the mounting brackets to the selected area you wish to place the battery wands.

**The battery wands can be secured outside the headrail in either vertical or horizontal position.*



We recommend the battery wands are secured behind the headrail so they are hidden from view.

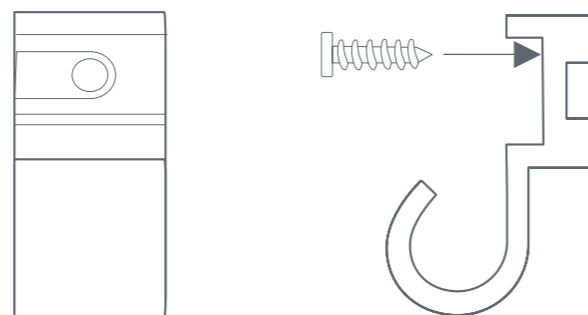

3. Clip the battery wands into the mounting brackets.

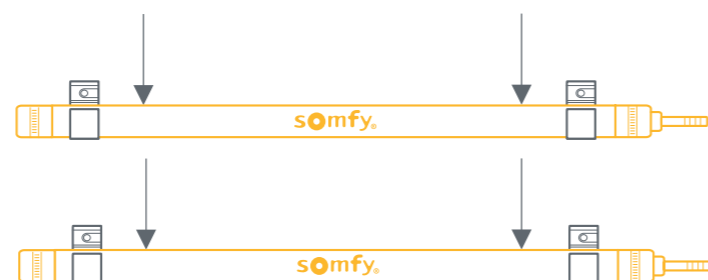

4. Connect the battery wands to the motor.

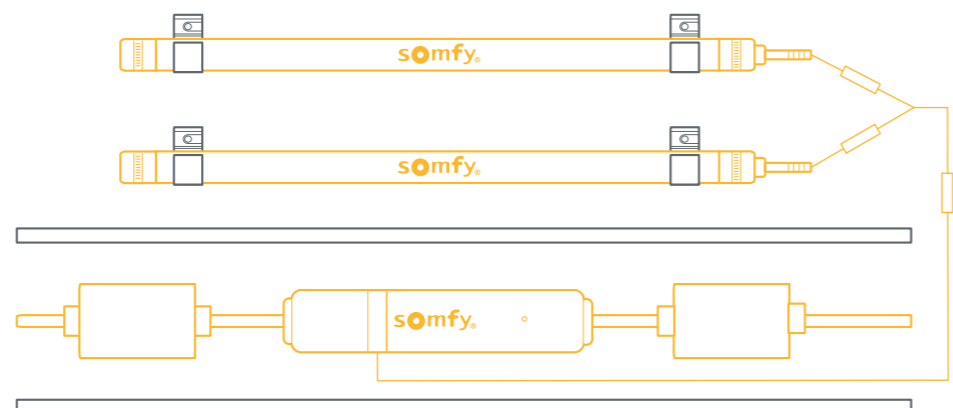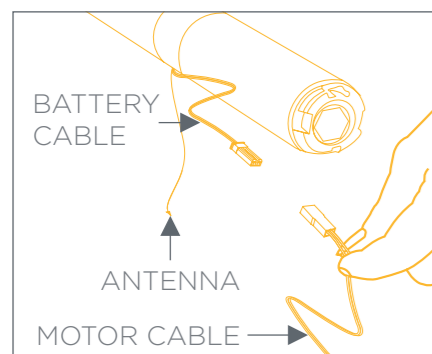

BATTERY PACK FITTING INSTRUCTIONS

LI-ION BATTERY PACK


The battery pack can either be attached to the wall or to the headrail.

WALL ATTACHMENT

1. Attach the wall brackets to desired area in window recess, leaving enough room for the blind.


**The battery pack can be secured outside the headrail in either vertical or horizontal position.*

We recommend the battery pack is secured behind the headrail so it is hidden from view.

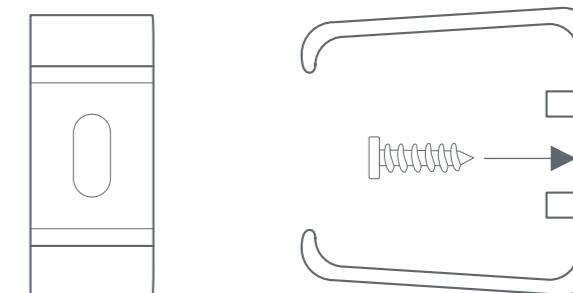


HEADRAIL ATTACHMENT



1. Fit the battery pack clips provided by hooking onto the back of the headrail, and rotating into place.

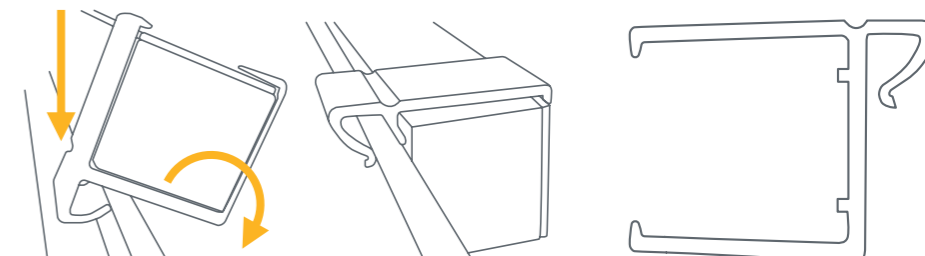

Push the battery pack into the clip and connect the battery.

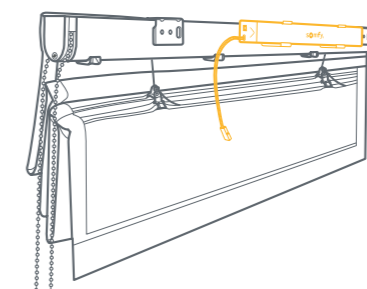

2. Connect the battery pack to the motor.

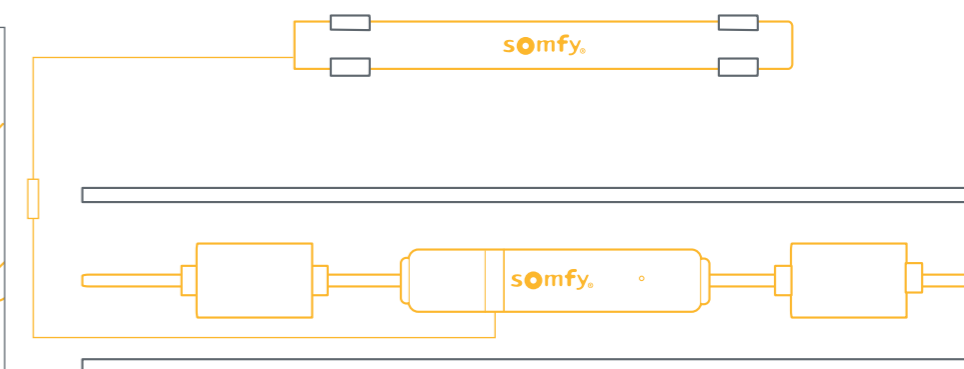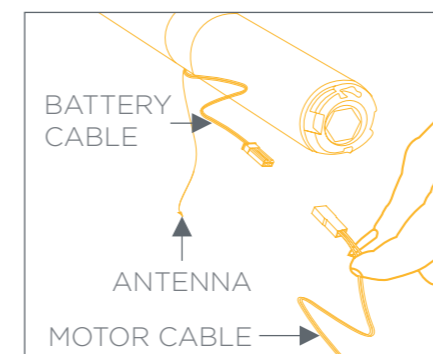


OPERATING YOUR SOMFY REMOTES

SINGLE CHANNEL REMOTES


SITUO RTS

SITUO 1 RTS PURE II

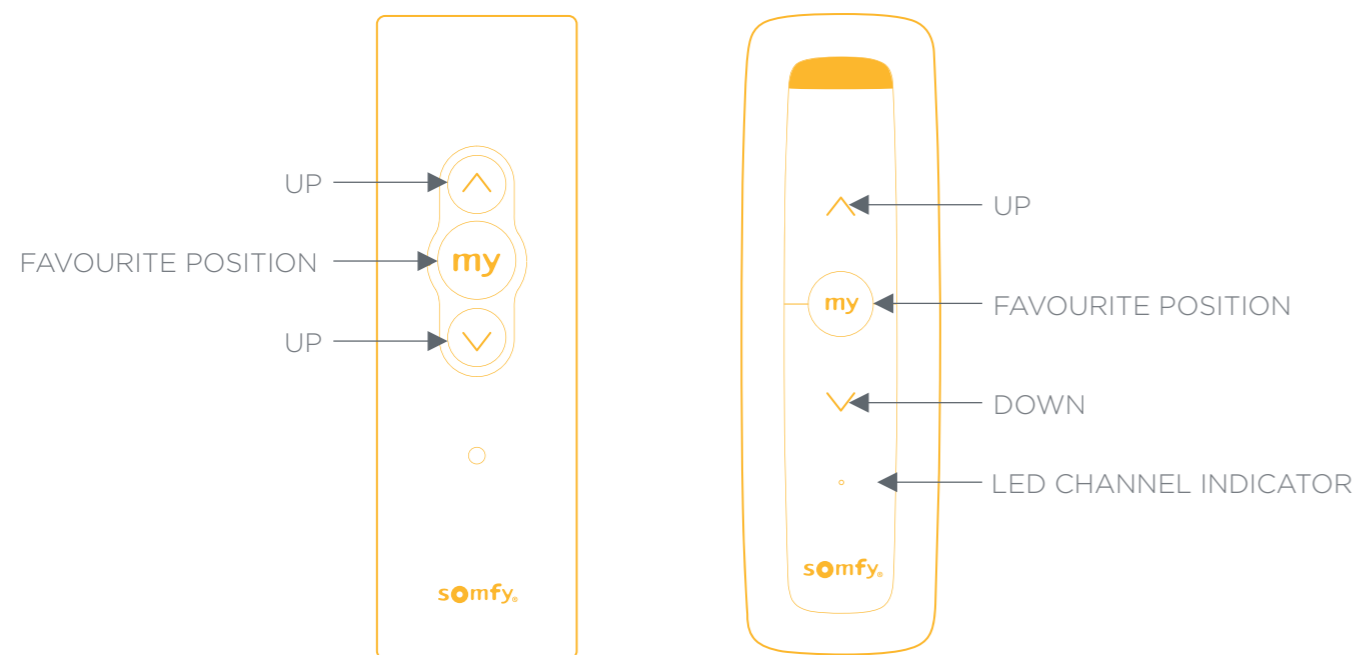

MULTI-CHANNEL REMOTES


SITUO 5 RTS

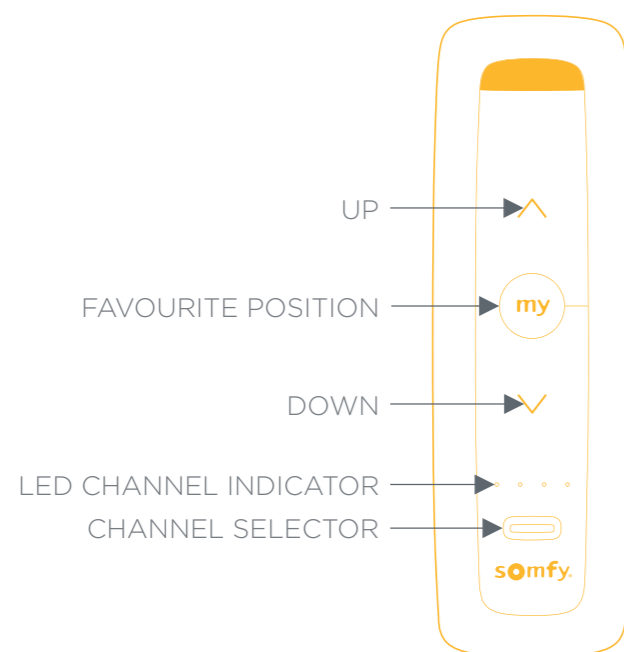


LIFT OPERATING

LIFTING THE BLINDS UP

1. Briefly press the **UP** button to lift the blinds.

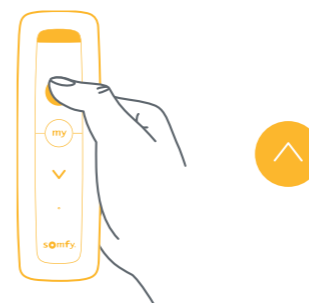


2. Press the **MY** button when the desired position is reached.

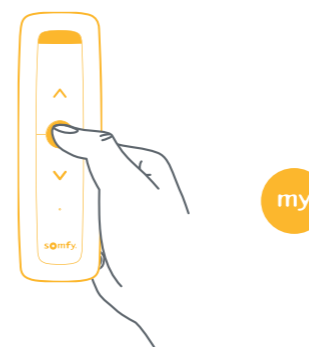


LOWERING THE BLINDS DOWN


1. Briefly press the **DOWN** button to lower the blinds.

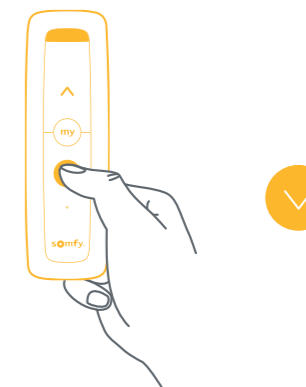

2. Press the **MY** (stop) button when the desired position is reached.

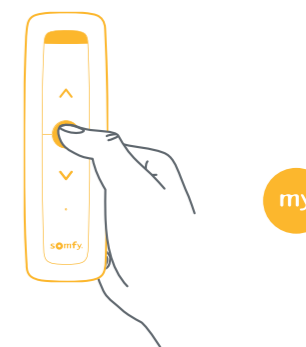

PROGRAMMING INSTRUCTIONS

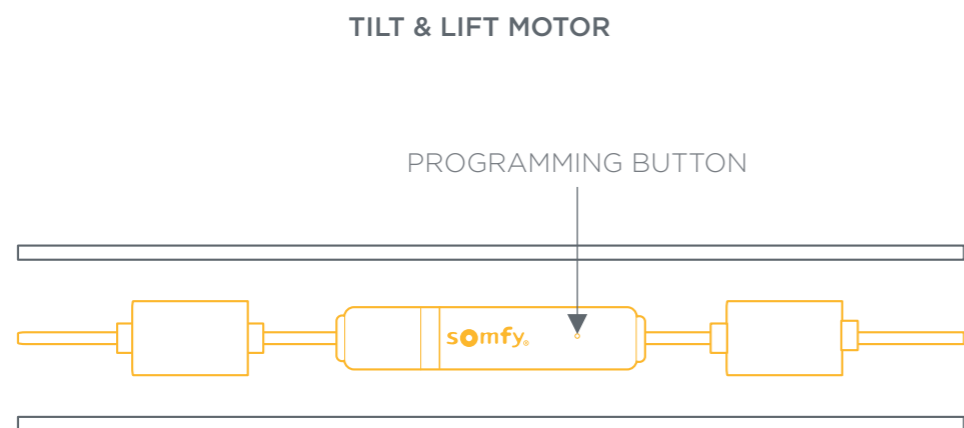


**When programming the motor the blind will be required to jog to confirm settings have been programmed, if the blind does not jog press the program button on the motor briefly until the blind jogs once.*

**Power should only be connected to the blind/blinds being programmed. All other blinds should be disconnected from their respective power while programming is in progress.*

PAIRING A REMOTE WITH A MOTOR


SINGLE CHANNEL REMOTE

1. On the remote, press and hold the **UP** and **DOWN** buttons simultaneously until the blind jogs.

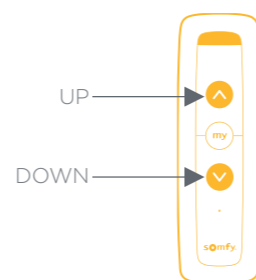

MULTI-CHANNEL REMOTE

1. Using the **CHANNEL SELECTOR**, select the desired channel (channel indicator will briefly be lit).

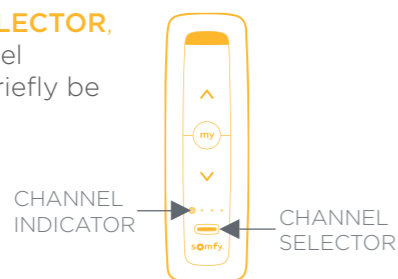

2. On the remote, press and hold the **UP** and **DOWN** buttons simultaneously until the blind jogs.



PROGRAMMING INSTRUCTIONS

 
PAIRING A SECOND REMOTE

**Note: Please finish programming the first remote before pairing a second remote.*

SINGLE & MULTI-CHANNEL REMOTE

1. Using a paperclip or pen, press and hold the **PROGRAM** button on the original remote or the motor until the blind jogs once.
2. Using a paperclip or pen, press the **PROGRAM** button on the new remote until the blind jogs once. Second remote is now added to the memory and can be used to operate the blind.

ORIGINAL REMOTE



ORIGINAL REMOTE



ORIGINAL REMOTE



NEW REMOTE

 


DELETING A REMOTE

SINGLE & MULTI-CHANNEL REMOTE

1. Using a paperclip or pen, press and hold the **PROGRAM** button on the original remote until the blind jogs once.
2. Using a paperclip or pen, press the **PROGRAM** button on the second remote until the blind jogs once. Second remote is now deleted and will not operate the blind.

ORIGINAL REMOTE



ORIGINAL REMOTE



NEW REMOTE



NEW REMOTE


Press for 3 secs

PROGRAMMING INSTRUCTIONS

ADDING A CHANNEL

MULTI-CHANNEL REMOTE


1. Select the desired channel you wish to duplicate by momentarily pressing the **CHANNEL SELECTOR** button on the multichannel remote.
2. Using a paperclip or pen, press and hold the **PROGRAM** button on the remote until the blind jogs once.
3. Ensuring you are on the new channel press the **PROGRAM** button on the remote until the blind jogs once. Additional (new) channel is now added to the motor memory and can be used to operate the blind.

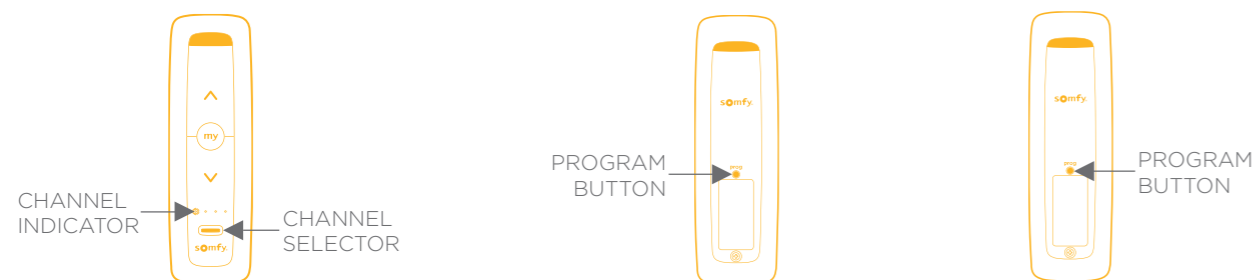

DELETING A CHANNEL

MULTI-CHANNEL REMOTE

1. Using a paperclip or pen, press and hold the **PROGRAM** button on the remote until the blind jogs once.
2. On the remote select the desired channel to be deleted.
3. Press the **PROGRAM** button on the remote until the blind jogs once. Channel is now deleted from the motor memory and will not operate the blind.

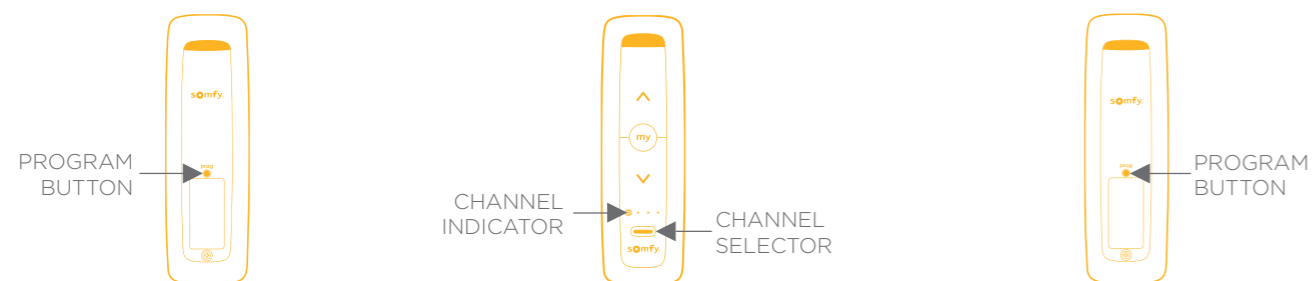

LIFT PROGRAMMING INSTRUCTIONS

ADJUSTING THE UPPER END LIMIT (UPPER BLIND POSITION)

SINGLE & MULTI-CHANNEL REMOTE

1. Press the **UP** button, to move the blind to the upper end limit.
2. Press and hold the **UP** and **DOWN** buttons simultaneously until the blind jogs.
3. Press and hold either the **UP** or **DOWN** button to adjust slats to the new position.
4. To confirm the new limit press and hold the **MY** (stop) button until the blind jogs.



ADJUSTING THE LOWER END LIMIT (LOWER BLIND POSITION)

SINGLE & MULTI-CHANNEL REMOTE

1. Press the **DOWN** button to move the blind to the lower end limit.
2. Press and hold the **UP** and **DOWN** buttons simultaneously until the blind jogs.
3. Press and hold the **UP** or **DOWN** button to move the blind to the new desired position.
4. To confirm the new limit press and hold the **MY** (stop) button until the blind jogs.



SETTING INTERMEDIATE LIMIT (MY FAVOURITE POSITION)

SINGLE & MULTI-CHANNEL REMOTE

1. Press the **UP** or **DOWN** button until the blind slats reach a desired favourite position, then press the **MY** (stop) button to stop. If necessary, adjust the desired slat position by pressing and holding either the **UP** or **DOWN** button.
2. Press and hold the **MY** (stop) button until the blind jogs. Favourite my slat position is now added to the memory.
3. Activate the blind favourite position by pressing the **MY** (stop) button from any slat position. Slats will move to the closed down position prior to stopping at the programmed my position.



ADJUSTING THE FAVOURITE POSITION

SINGLE & MULTI-CHANNEL REMOTE

1. Press the **UP** or **DOWN** button until the blinds reach the desired favourite position.
2. Press the **MY** button until the blind jogs. Favourite position has now been set.



ADJUSTING THE SPEED

DECREASING THE MOTOR SPEED

1. To reduce the tilt speed, press the **MY** (stop) and **DOWN** buttons until the blind jogs. There are 4 speed settings, repeat as needed. The minimum setting has been reached when the motorised product briefly moves 3 times in one direction then 3 times in the other direction.

**Motor has 4 speed settings, each action decreases speed by 1. When lower speed has been reached, blind will no longer respond.*



INCREASING THE MOTOR SPEED

1. To increase the tilt speed, press the **MY** and **UP** buttons until the blind jogs. There are 4 speed settings, repeat as needed. The maximum setting has been reached when the motorised product briefly moves 3 times in one direction then 3 times in the other direction.


**Motor has 4 speed settings, each action increases speed by 1. When upper speed has been reached, blind will no longer respond.*



RESTORE TO FACTORY SETTINGS

1. To delete all previous settings: Using a paperclip, press and hold the **PROGRAM** button, located on the top of the motor casing, until the blind jogs 3 times (approx. 12 seconds).

**All remotes and limits will be erased from the motor memory. Motor is now reset to factory mode.*

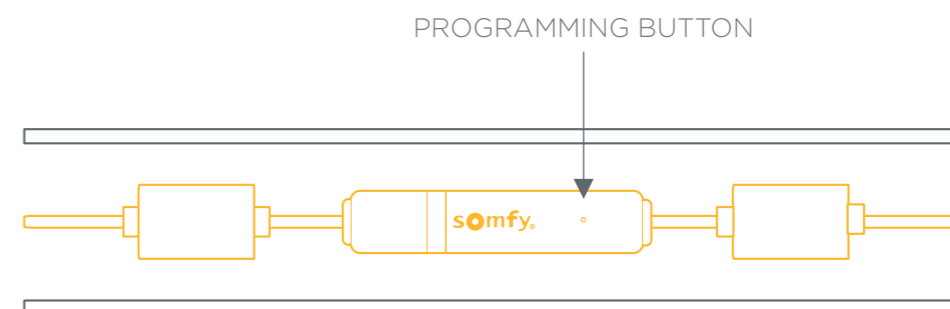



somfy® Building
happiness



As the manufacturer, Somfy ACTIVITIES SA, F-74300 CLAUSES hereby declares that the drive covered by these instructions, when used as intended according to these instructions, is in compliance with the essential requirements of the applicable European directives, in particular the Machinery Directive 2006/42/EC and EMC Directive 2014/30/EU.



The full text of the EU declaration of conformity is available at www.somfy.com/ce. Antoine Crézé, Approval manager, acting on behalf of Activity director, Cluses, 02/2019.



Please separate storage cells and batteries from other types of waste and recycle them via your local collection facility.



We care about our environment. Do not dispose of the appliance with usual household waste. Give it to an approved collection point for recycling.